

SPECIFICATIONS FOR 575M-6

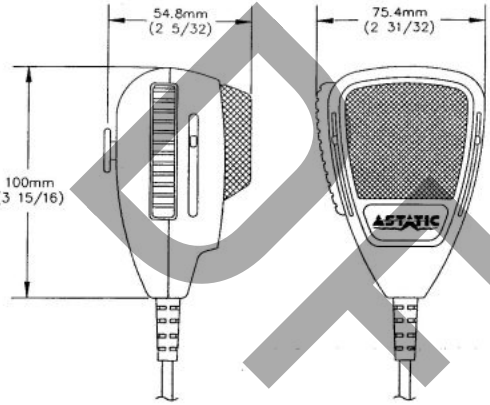

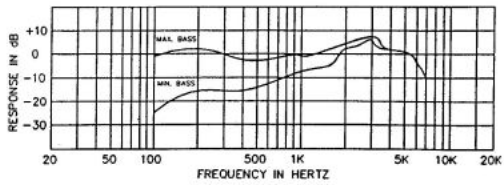

Battery Replacement


Remove the rear housing by removing the four screws. Carefully lift off the rear housing. Unsnap the battery from the battery connector and install a new battery. Carefully replace the rear housing and fasten with the four screws previously removed. Depress the switch lever fully while tightening the screws.

Volume and Tone Adjustments

At a speaking distance of approximately 2 inches (or the position you prefer) with the external volume control set at 0 and the tone control set in the center position, adjust the volume control for the correct modulatio level. Sliding the volume control toward 9 increases the volume. The external tone control should then be adjusted for the most intelligible sound. Slide the tone control toward 0 for an increase in bass response and towards 9 for a decrease in bass response.

Connector-Cable Clamping

If the microphone plug you have selected for your hookup requirements does not have a cable clamp suitable for this small diameter high quality microphone cable, use tubing as supplied by **ASTATIC**. Simply slip tubing over cable prior to soldering of lead wires. Position it ti ensure proper clamping of cable and tubing by the connector.

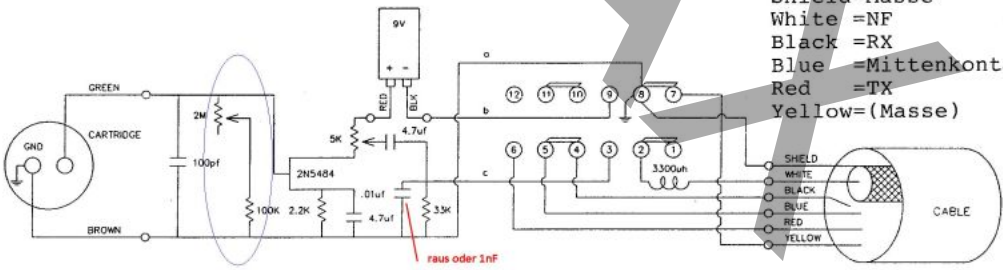


```
Shield=Masse
White =NF
Black =RX
Blue  =Mittenkontakt
Red   =TX
Yellow=(Masse)
```